

# 无线会议系统设备



## 使用说明书



 
请在使用前仔细阅读本说明书

www.infobitav.com

### 设备概述


无线会议系统设备基于互联网电脑设备的USB接口连接,具有外置音箱输出接口,实时输出会议音频,配置的多个无线全向麦克风,拾音范围覆盖更全面,同时还配有本地外接麦克风输入接口,使会议布置更加简单、快速、高效。

### 设备介绍

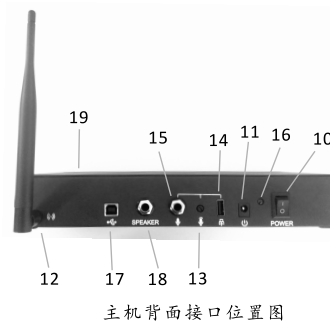

- (10) 电源开关按钮
- (11) 直流电源输入接口
- (12) 外置天线接口
- (13) 外接麦克风增益调节
- (14) USB 5V电源输出口
- (15) 6.5mm麦克风输入接口
- (16) 电源指示灯
- (17) USB数据接口
- (18) SPEAKER音频输出口
- (19) SPEAKER音频输出状态灯 (在主机正面位置)

 - (1) 从机状态环形灯
- (2) 内置麦克风
- (3) 喇叭静音键
- (4) 音量减少键
- (5) 音量增加键
- (6) 麦克风静音键
- (7) 充电指示灯
- (8) USB充电接口
- (9) 从机开关机按键

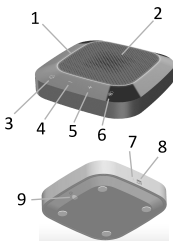

无线麦克风从机

(1)


### 包装清单



主机和外置天线X1



 无线麦克风从机≧4



音频连接线和音频转接头x1



主机电源适配器X1



主机USB数据线X1



从机电源适配器≧4套




使用说明书X1

(2)

### 设备安装连接

 - 1、主机按图示,首先安装好外置天线,用USB数据线连接好电脑设备,再用主机电源适配器插头插入主机电源输入口,再插到交流电源插座上,打开主机电源开关按钮,主机电源指示灯会亮起红灯。
- 2、无线麦克风从机在使用前,需连接USB电源适配器对内置电池先充满电,充电时,从机充电指示灯会亮起红灯,充满电时灯会熄灭。与主机无线连接使用时,从机环形灯闪烁红灯时,表示电池低电,也需及时进行充电。
- 3、无线麦克风从机,长按住开关机按键一会儿,直到环形绿灯常亮,表示与主机无线连接成功,如果此绿灯闪烁,表示与主机没有无线连接。
- 4、主机连接的音箱和所有的无线麦克风从机安装距离需要大于2米,无线麦克风从机相互之间推荐的安放距离为1.5米。


#### 主机设备连接安装示意图

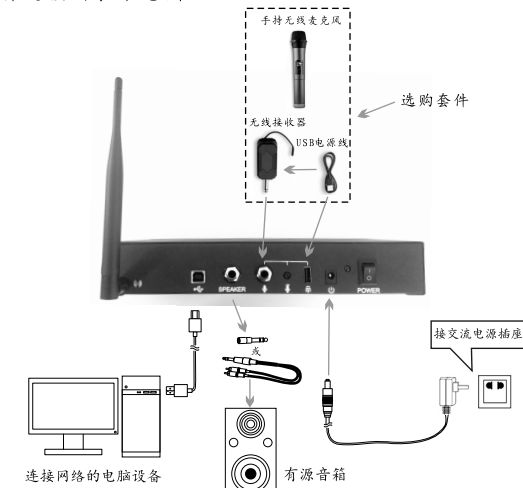


(3)

### 操作说明
 
#### 1、网络会议电话主要应用连接图

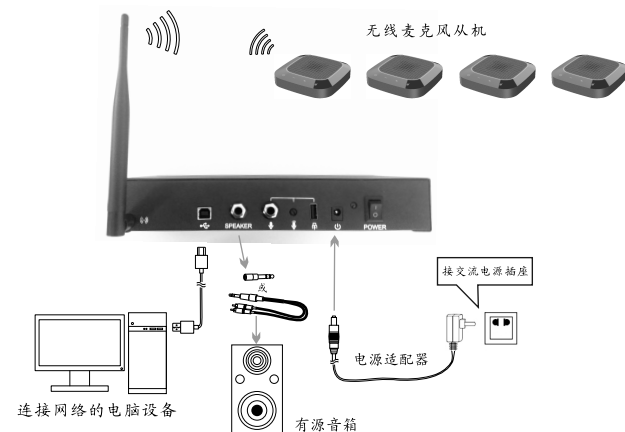

#### 2、本地教室和会议室扩音应用连接图

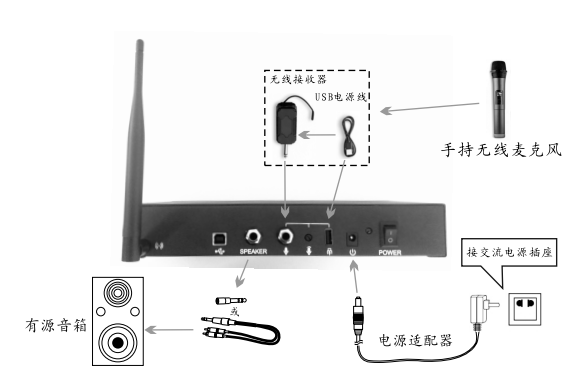 

(4)

### 操作说明

- 1、根据会议应用场景,按照设备安装要求,布置好连接主机的音箱和无线麦克风安放位置。主机装上天线,用USB数据线与电脑设备连接好,音箱音量调至较小位置,插上直流电源适配器供电,打开主机电源开关,电源指示灯会亮起红灯,SPEAKER音频输出状态灯会默认亮起绿灯。
- 2、依次长按每个无线麦克风从机开关机按键,当其环形绿灯常亮,表示与主机已无线连接。
- 3、通过电脑设备的网络即时通讯应用软件(比如:QQ、SKYPE等),建立好远端和本地的通话,呼叫过程中,适度调大音箱主机的音量和电脑麦克风灵敏度大小,以清晰听到本地和远端会场说话声音为准,调整好,就可以进行网络会议电话的交流互动了。
- 4、通话中,无线麦克风要静音,请按“麦克风静音”键,环形红灯会常亮;要解除静音,再按一次“麦克风静音”键,环形红灯会熄灭。
- 5、通话中,音箱喇叭要静音,请按从机的“喇叭静音”键,主机正面的SPEAKER音频输出状态灯会亮起红灯;要恢复喇叭放音,再按一次“喇叭静音”键,主机的红灯又会转为绿灯状态。
- 6、本设备作为本地教室和会议室扩音应用时,可以连接6.5mm插头的外置麦克风,比如可以选购手持无线麦克风套件按连接图安装好,进行本地扩音使用,必要时,可以适度调整外接麦克风增益大小。

说明:本设备适用于Windows等操作系统的PC电脑设备,USB接口为USB1.1或USB2.0以上,USB数据线为即插即用,无须额外安装

### 注意事项

- 1、在网络电脑设备上除连接本设备外,不能同时连接其它麦克风和扬声器设备,可能会引起啸叫。
- 2、将主机的USB数据线直接连接到电脑设备上,若通过USB集线器连接可能会引起操作问题。
- 3、本设备连接成功后,在电脑设备控制面板选项的声音和音频设备属性中,播放(输出)和录制(输入)的默认设备会显示“本机设备型号”,否则需要重新选择“本机设备型号”进行确认。
- 4、设备内置电池,避免靠近高温和火源,会引起爆燃危险。
- 5、请勿尝试维修本设备,会有触电危险。如存在问题需要维修,请与您的经销商联系。

(5)

## Wireless conference system equipment



## Operating Manual



 
Please read this manual carefully before use

www.infobitav.com

### Equipment Overview

Connected via the USB interfaces of Internet computer devices, the wireless conference system (hereinafter referred to as "the System") can be mounted with external loudspeaker output interfaces to output meeting audio in real time. It is also mounted with multiple wireless omnidirectional microphones for the overall pick-up and also with local microphone input interfaces for ensuring easy, fast and efficient arrangement of meeting.


### Equipment Introduction

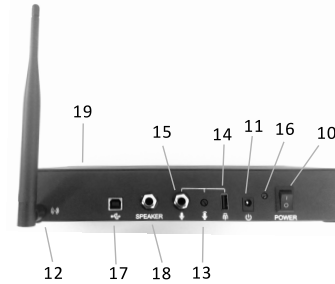

Panel Diagram in Back of the Host

- (10) Power switch button
- (11) DC power input port
- (12) External antenna port
- (13) External microphone gain adjustment
- (14) USB 5V power output port
- (15) 6.5mm microphone input port
- (16) Power indicator
- (17) Master USB data interface
- (18) SPEAKER audio output port
- (19) SPEAKER audio output status indicator (at front position of host)

 - (1) Slave status ring light
- (2) Built-in microphone
- (3) Speaker mute key
- (4) Volume - key
- (5) Volume + key
- (6) Microphone mute key
- (7) Charging indicator
- (8) USB charging interface
- (9) Slave on/off button

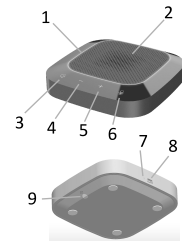

Wireless microphone slave

(1)


### Packing List



 Host and external antenna X1



Wireless microphone slave ≅ 4




Audio cable and audio adapter X1



Host power adapter X1



 Host USB cable X1



Slave power adapters ≅ 4 sets




Operating Manual X1

(2)

### Installation and Connection of Equipment

 1. As shown in the diagram, firstly connect the external antenna, connect the compute device via USB data wire, insert the pug of host power adapter into the power input port of host and then insert the AC power supply into the socket; turn on the power button of host and host power indicator will turn red.
2. Before use, the wireless microphone slave should be connected with the USB power adapter to fully charge the built-in battery. The slave charging indicator will be on in orange when charging and will be off when the battery is fully charged. When the host is connected wirelessly, the slave ring light flashes in red, indicating low battery and that the battery needs to be charged in time.
3. Long press the slave power button until the circular green indicator is on, which means the wireless microphone slave is connected with the host successfully through wireless mode; if this indicator flickers in green, it has no wireless connection with the host.
4. The installation distance between host loudspeaker and wireless microphone slave must be over 2m; the recommended installation distance between wireless microphone slaves is 1.5 m.


#### Schematic Diagram for Connection of Host Devices

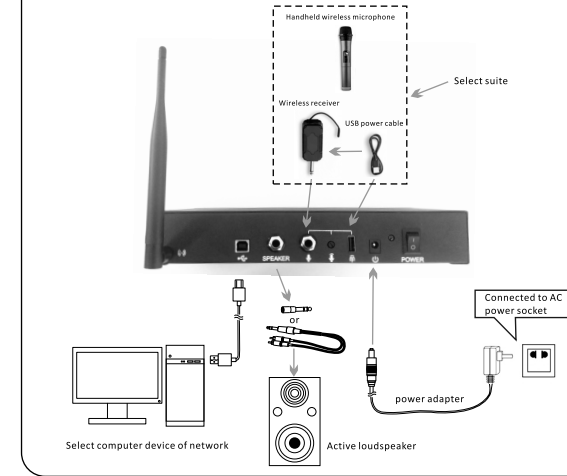


(3)

### Operation Instructions
 
#### 1. Main Application Connection Diagram of Net Conference Telephone

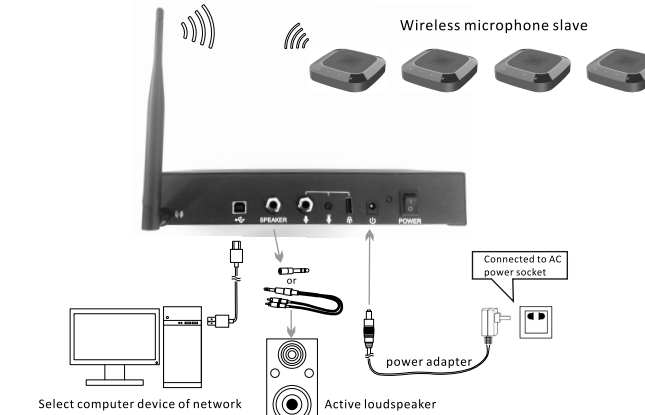

#### 2. Connection Diagram of Sound Application in Local Classroom and Meeting Room

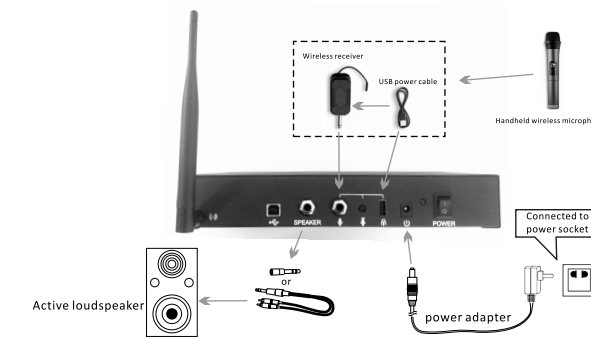 

(4)

### Operation Instructions

1. According to meeting application scenario and requirements for equipment installation, determine the installation locations of the active loudspeaker and wireless microphone, install the antenna on the host, connect the host to the computer the USB cable, adjust the loudspeaker to a low volume, insert the DC power adapter to supply power, turn on the power switch of host and power indicator will turn red; the indicator of SPEAKER audio output status will turn green by default.
2. Press and hold the on/off button of each wireless microphone slave in turn. When the green light is always on, it means that the slaves have been connected wirelessly to the host.
3. The communication between the remote and local meeting places shall be established through the network instant messaging APP (such as: QQ, SKYPE, etc.) of the computer; in the call process, it is necessary to moderately turn up the volume of the loudspeaker and adjust the sensitivity of the computer microphone so that we can clearly hear the voice of the local and remote meeting places, and then you can proceed to interactions through network conference telephone.
4. During the call, you can press the "Microphone Mute" button to mute the wireless microphone, at the moment, the ring red light will be always on; you can press the "Microphone Mute" button again to release the mute function and the ring red light will be off.
5. Click "Speaker mute" key of wireless microphone slave during communication and the indicator of SPEAKER audio output status at front side will turn red; click "Speaker mute" button again to recover the voices and the red indicator of host will turn green again.
6. When the device is used for loudspeaker application in local classrooms and conference rooms, it can be connected with the external microphone with a 6.5mm plug. For example, handheld wireless microphone suite can be selected and installed according to the connection diagram for local sound amplification. The external microphone gain can be adjusted properly if necessary.

Note: This device is applicable for PC with Windows and other operating systems. USB interface adopts USB1.1, USB2.0 or above; USB cable is plug and play and does not need to install additional driver.

### Notes

1. In addition to this device, network linked PC cannot be connected with other microphone and loudspeaker at the same time to avoid problems in use.
2. Connect the USB cable of the loudspeaker master directly to the computer device. The use of the USB concentrator for connection will lead to problems in operation.
3. After the device is successfully connected, the default device for playing (output) and recording (input) will display "Model of Local Device" in the sound and audio device properties of the control panel option of the computer device; otherwise, "Model of Local Device" needs to be selected again for confirmation.
4. Keep the built-in battery of the equipment off high temperature and fire source to avoid explosion risk.
5. Please do not try to repair the equipment, or else it may cause electric shock. If there is a problem and the equipment needs to be repaired, please contact your dealer.

(5)