



iTrans DX-R-22

Quick Guide

1. Product Introduction

This product is applied to the audio system field to convert the analog audio signal to Dante audio signal. Power supply Ethernet (PoE) switch.

2. Product Feature

1. Function Introduction: Convert the received Dante network audio signal to analog audio signal.
2. Input & Output : Support two analog audio signal outputs, two Dante inputs.
3. Hardware interface type: Two XLR are used to output analog audio signals; One RJ45 port is used to input Dante network audio signal.

4. Technical Parameters

Model No.	iTrans DX-R-22
Product Type	Audio signal adapter
Function	Convert Dante audio signal to analog audio signal output
3 pin XLR F/M	2
RJ45 Port	1
Analog audio interface	XLR
Dante	RJ45
Frequency response	20Hz to 20kHz (-/+0.5dB)
Maximum signal level (balanced)	+18dBu / +4dBu / 0dBu
Dynamic range	> 100dB
SNR (Signal to Noise Ratio)	> 100dB
THD (Total Harmonic Distortion)	< 0.01% (+4dBu)

Power consumption	<1W
Operating temperature	0-40°C
Size (LxWxH)	652mm x 32mm x 22mm
Weight	0.2kg

4. Product Overview




iTrans DX-R-22

- 1 RJ45: Dante network, must connect to PoE switch
- 2 XLR: Analog audio outputs

5. Product Connect

1. Download and install the Dante Controller from Audinate website (www.audinate.com).
2. Connect the device to the switch using Dante network audio system with network cable.
3. The analog audio transmission device is connected through the XLR interface.
4. Search for devices in Dante Controller software, Select and open the devices to be configured. On the Routing page, match the input row with the output column with a custom check.
5. Once set up and configured the audio routing between audio device, the audio device will remember and save the settings.
6. Do not spill any corrosive chemicals or liquids on or near the equipment.

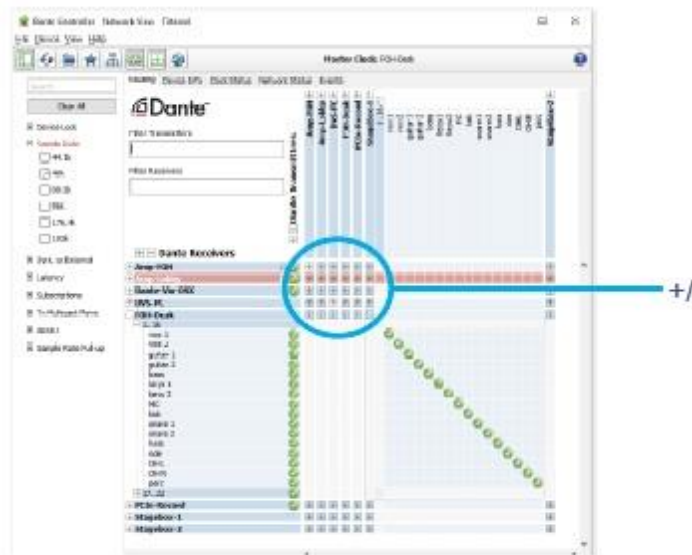

Contact US

www.infobitav.com

info@infobitav.com

7. Packing List

DX-R-22	Quick Guide
1Set	1Pcs

8. Notes:

In order to ensure the reliable use of equipment and the safety of personnel, please follow below details when installing, using and maintaining:

1. When the equipment is installed, ensure that the ground wire in the power line is well grounded and the connection point of the chassis is well grounded.
2. Keep the working environment well ventilated, so that the heat generated by the equipment can be discharged in time, so as not to damage the equipment due to high temperature.
3. If the equipment is not used for a long time or in a wet condensation environment, the main power supply should be turned off.
4. Be sure to unplug the ac power cord of the equipment from the power supply socket before the following operations:
 - A. Remove or reload any part of the equipment.
 - B. Disconnect or reconnect any electrical plug or connection to the device.
5. Non-professionals without permission, do not dismantle the equipment without authorization, so as to avoid the risk of electric shock. Do not repair, so as not to increase the damage of the equipment.